



RZR XPT HIGH FLOW FUEL PUMP INSTALLATION

Thank you for purchasing your high flow fuel RZR Turbo pump from Aftermarket Assassins! The factory fuel pump on the 2016 is very weak, and the 2017+ models are not much better. When trying to run E85 or larger injectors, often times the fuel pump needs an upgrade. Many fuel pumps have issues and will start getting weaker and weaker right from the factory. This pump is much higher quality and will flow much more fuel for those larger tunes... Especially with the larger injectors, E85 & bigger/upgraded turbos. Keep in mind this pump is higher flow and may increase your AFR readings by .1 to .5 depending on model/tune. Read carefully below on how to install.

- Remove the passenger seat (or rear passenger side seat on a 4 seater) to access the fuel tank/pump assembly.
- Remove the quick disconnect couplers being careful with the small amounts of fuel that may be spilled.
- Remove the wire connector going to the fuel pump assembly
- Using a special tool or a screwdriver & hammer, loosen the large plastic fuel pump "nut"
- Unscrew the fuel pump assembly from the tank and remove carefully
- Remove the stock pump by removing the 2 wires and fuel hose. We normally just cut the fuel hose off to prevent damage to the housing.
- Once the factory pump is removed, we will need to crimp a new end on the black ground wire. This connector is supplied.
- To fit the new pump, cut the bottom cradle as shown in picture 2 so it still slightly holds the pump, but allows it to fit
- Install the supplied fuel line on the housing with the supplied clamp. Slide the other clamp on the hose as well, then install your high flow fuel pump in the bottom of the housing. Put the other end of the hose over the fuel pump as shown in picture 2 and clamp in place.
- Plug in the 2 wires to the fuel pump. The pump is labeled with a + and - on it. Red goes to +, Black goes to -
- Use the supplied zip tie to go around the pump and the pump housing to hold the pump securely in place.
- Install the supplied fuel sock on the bottom of the pump
- Install the fuel pump housing back into the tank
- Hook up the fuel and electrical connectors to the fuel pump assembly
- Locate your fuse box and install the supplied 15a fuel pump fuse
- Go Ride!

