

Can-Am Door Handle Install

TOOLS NEEDED FOR INSTALL: Drill, .250 drill bit, 1/8" Allen wrench, 7/16 wrench, T30 Torx

FRONT

- 

1 REMOVE COVER
- 

2 COVER REMOVED
- 

3 DRILL RIVOT OUT .250
DRILL BIT
- 

4 STRAP REMOVED
- 

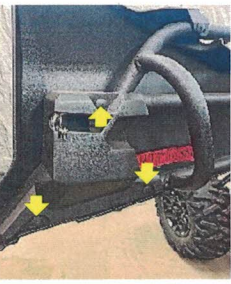
5 DRILL HOLE TO .250
- 

6
- 


7 INSTALL AND TIGHTEN
BOLTS
- 

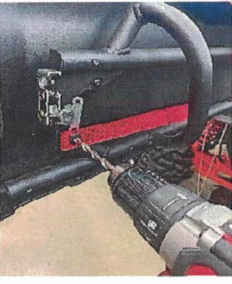
8 FINISHED

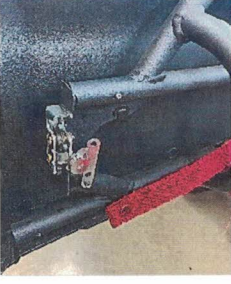
REAR


- 

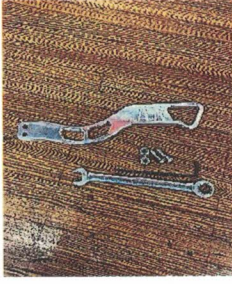
1 DRILL RIVOTS OUT .250
DRILL BIT
- 


2 DRILL RIVOTS OUT .250
DRILL BIT
- 

3 COVER REMOVED
- 

4 DRILL RIVOT OUT .250
DRILL BIT
- 

5 STRAP REMOVED
- 

6 DRILL HOLE TO .250
- 

7
- 

8 INSTALL AND TIGHTEN
BOLTS

PLEASE GIVE @AJKOFFROAD A SHOUT OUT ON SOCIAL MEDIA AFTER INSTALL

PLEASE CONTACT AJK OFFROAD WITH ANY QUESTIONS AT : CONTACT@AJKOFFROAD.COM