


# EOD 2020+ Polaris RZR Pro Xp / Pro R / Turbo R AMP Door Skins 2 Seat

P/N- DRS610038

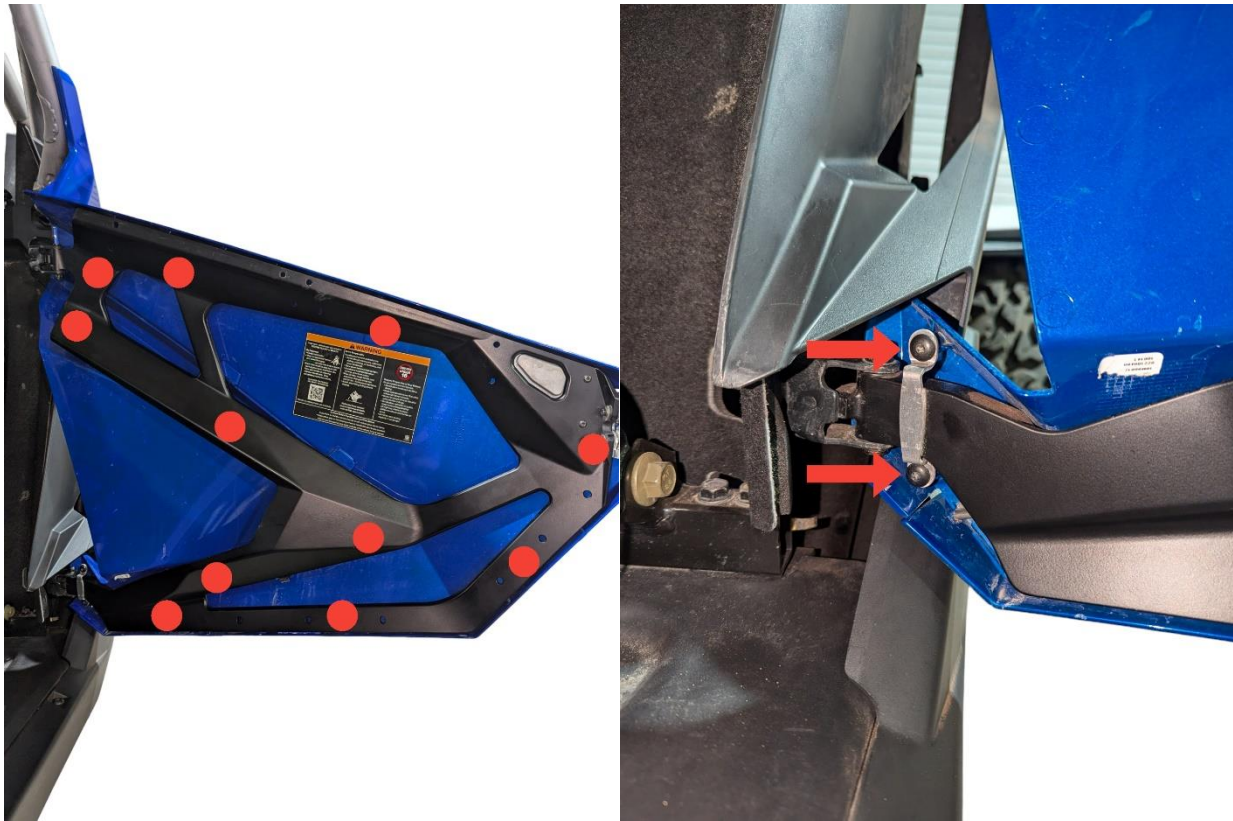

- Start off by opening the door and removing the aluminum strap that wraps around the lower door hinge with a T25 torx, next remove the remaining 9 T40 torx bolts. When all the hardware is out shut the door and then lift the outer door skin off the door frame. No hardware taken off will be used furthermore.



- Lay the EOD door skin on a clean scratch free surface and remove all the hardware and two braces per skin, keep all the hardware and go ahead and discard the braces that were just removed.



- Carefully lower the door skin over the top of the door frame with the bottom section of the skin slightly angled out to assist in installation, once it is lowered down and on top let the bottom swing down and get a couple holes lined up with a couple bolts started. Go around the rest of the door skin and loosely install all the remaining removed bolts.



- The last thing to do is slowly tighten down the bolts starting with the center area and working your way to the outside of the skin, once they are all tightened up go over the skins with a detailer of your choice to remove any fingerprints or light marking from the packaging material. Perform a final check over of all the work completed and enjoy another great product from Elektric Offroad Designs!