



Made for first. Built to last.

DISCLAIMER:
PRODUCTS MADE BY L AND W FAB AND MACHINE INC. ARE INTENDED TO FIT YOUR STOCK UTV UNLESS OTHERWISE SPECIFIED. INSTALLING, MODIFYING, OR REMOVING ANY COMPONENTS (FACTORY OR AFTERMARKET) NOT SUPPORTED BY L AND W AND THE INSTRUCTIONS HEREIN WILL VOID YOUR WARRANTY. FOR MORE INFORMATION ON INSTALLATION, WARRANTY, OR PRODUCT USE PLEASE CALL US AT (770) 445-9778

Polaris RZR PRO XP Front sport bumper


Fitment: 2019-CURRENT PRO XP



INSTALLATION MANUAL

Parts List:

Item #	Part #	Description	Qty.
1	N/A	FRONT BUMPER	1
2	N/A	5/16-18 X 1" BOLT	2
3	N/A	5/16 SAE WASHER	4
4	N/A	5/16 SPLIT LOCK WASHER	2
5	N/A	5/16 HEX NUT	2

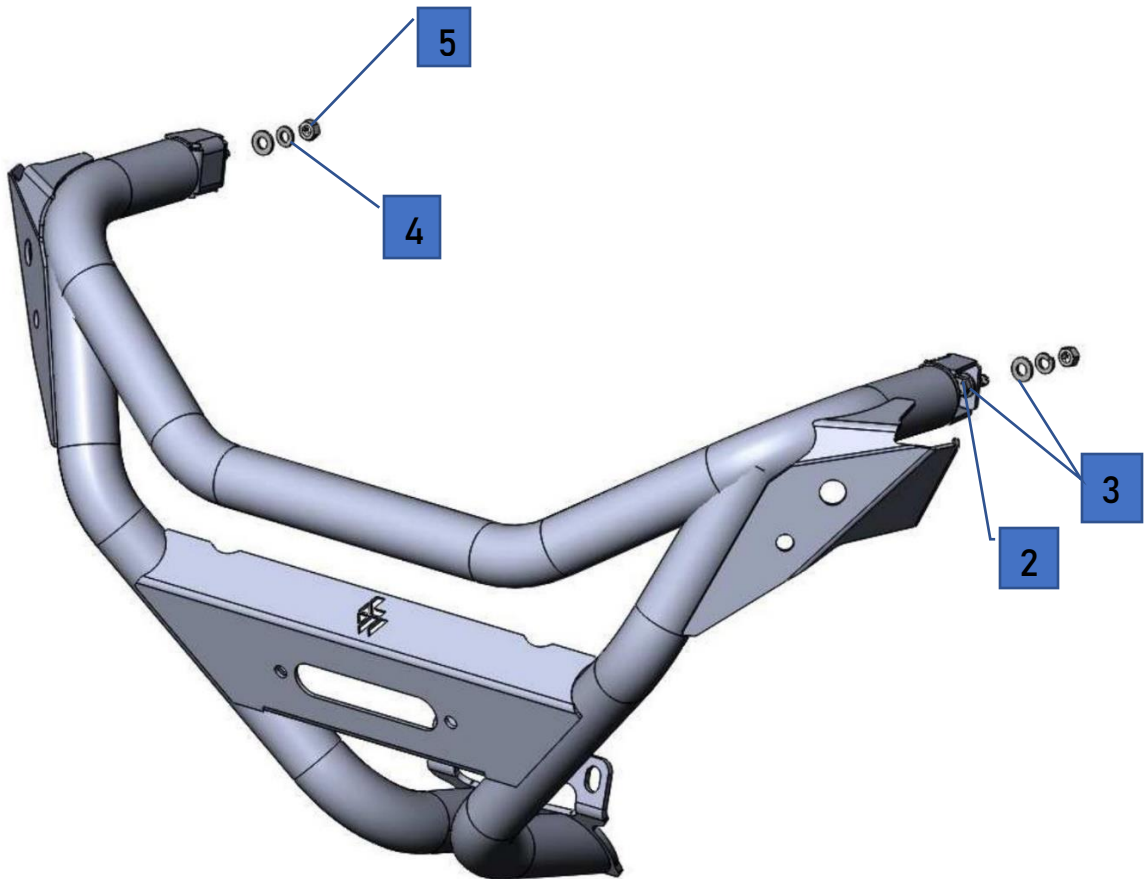

Installation:

STEP 1:

Remove the factory (or aftermarket if using winch) front plastic cover to access lower bolts.

STEP 2:

Remove the 2 lower bolts on each side of the factory pull point. You will be reusing these bolts.



STEP 3:

Place the bumper through the upper holes in plastics and let hang.



STEP 4:

Using the bolts removed in step 2, start the lower bolts but do not tighten.



STEP 5:

Install upper bolts. Use a flat washer on each side, followed by a split lock washer and nut. Once all bolts are started, continue to tighten all.





THANK YOU FOR CHOOSING L&W FAB!